


Elite Triumph Armrest Removal Procedure

For questions, clarification or assistance call 800-592-0548 X 1



Lift leg rest assembly until it is even with the seat.

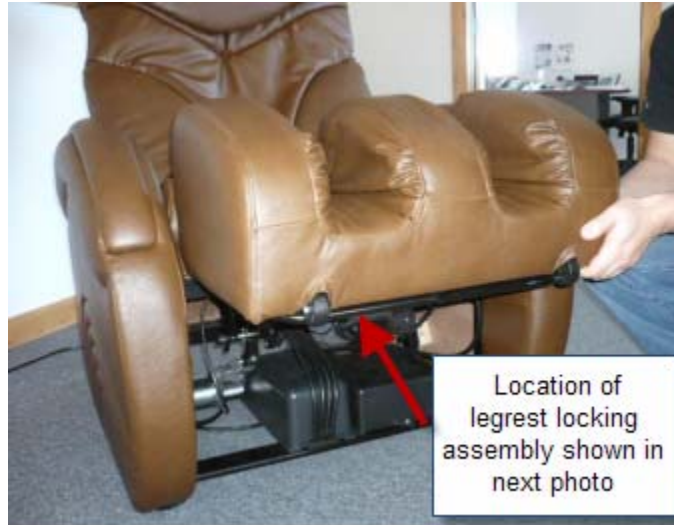

Lock the leg rest assembly in the up position by reaching underneath the footrest assembly and pushing the locking lever (square tubing) up until it is flat against the upper tubing and locks the leg rest in up position.



Reaching from the front and rear of the chair, remove the four thumbscrews holding that arm onto the frame. Thumbscrews shown below are on the left arm. The thumbscrews are in the same position on each side.

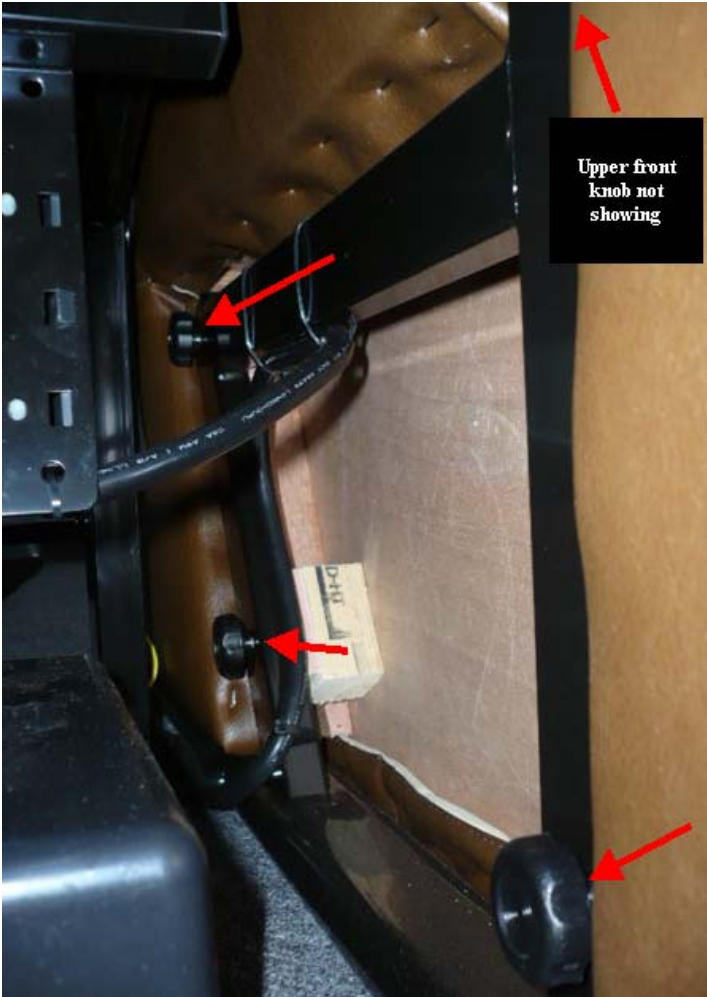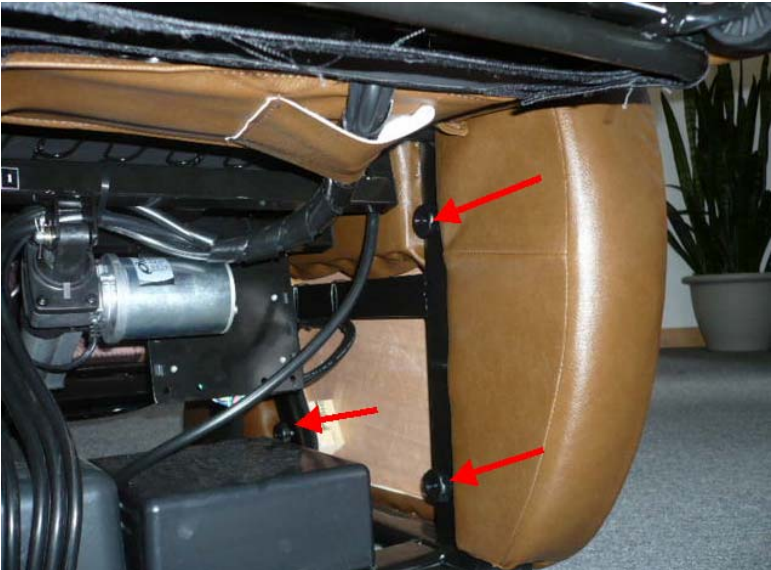

With thumbscrews removed, the arm can be pulled straight out from side of chair as shown with the left arm below. Do the same for the right arm.



To reinstall, align bolts on arms to holes in the frame and hand tighten the thumbscrews back onto bolts reversing the procedure described above

