


Elite Triumph Air Compressor Replacement

For questions, clarifications or assistance call 800-592-0548 X 1

Tools required: Phillips screwdriver #2, needle-nose pliers

BEFORE BEGINNING turn the main switch off as illustrated below and unplug the power cord.

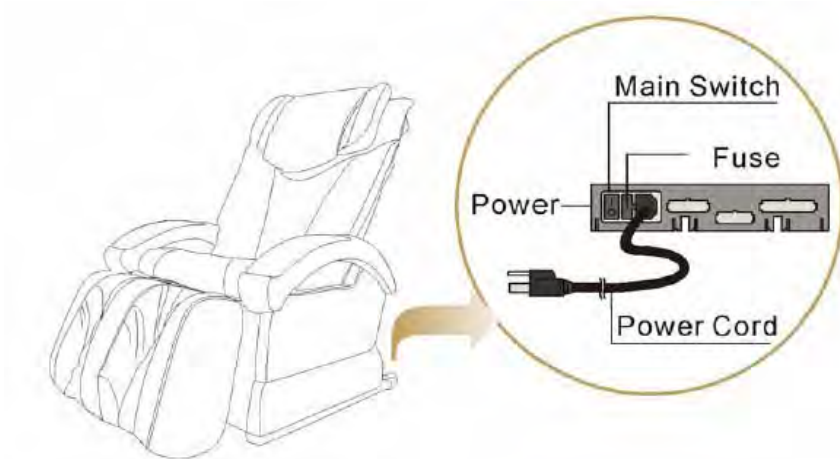

Allow the chair to sit for 10 minutes before proceeding.

Step 1): Lock the leg rest assembly in the raised position. This will allow increased access to the working area.

Lift leg rest assembly until it is even with the seat.



Lock the leg rest assembly in the raised position by reaching underneath the footrest assembly and pushing the locking lever (square tubing) up until it is flat against the upper tubing and locks the leg rest in raised position.



Step 2): Lay the back of the chair down over the seat of the chair.

Reach under the back of the chair with your right hand.....about 6" in from the left side and about 4" in from the back cover. Locate the latch mechanism with a finger and pull latch out to release.





CAUTION, when the latch is release it will be free weight and will pivot.
Hold the top of the chair and lay forward gently.




Hold onto the seat back until it is firmly lying on the seat.
DO NOT ALLOW chair back to 'drop' unsupported onto the seat.

Step 3) Remove the front four air lines from the air compressor. Pull the air hoses straight up to release them from the connectors.



Step 4) Remove the rear four air lines. Pull the air hoses straight up to release them from the connectors.

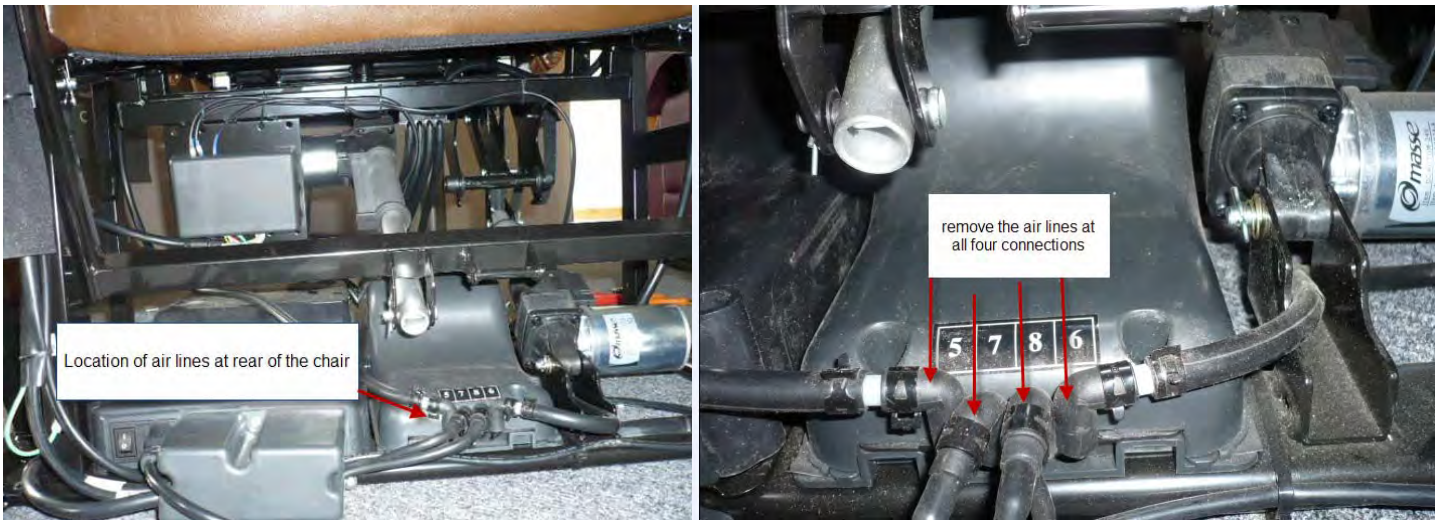


Step 5) Remove the Phillips screws which hold the rear of the air compressor cover to the base. The screws are located in recessed areas just behind where the rear air lines were removed in step 4.



Step 6) Now that screws have been removed, lift up the cover. This will release the front cover lock tabs referred to in step 3 at the other end of the cover. From the rear, slide cover out through the front end of chair.



Step 7) Unplug the white plug from the air compressor expansion board as shown below.

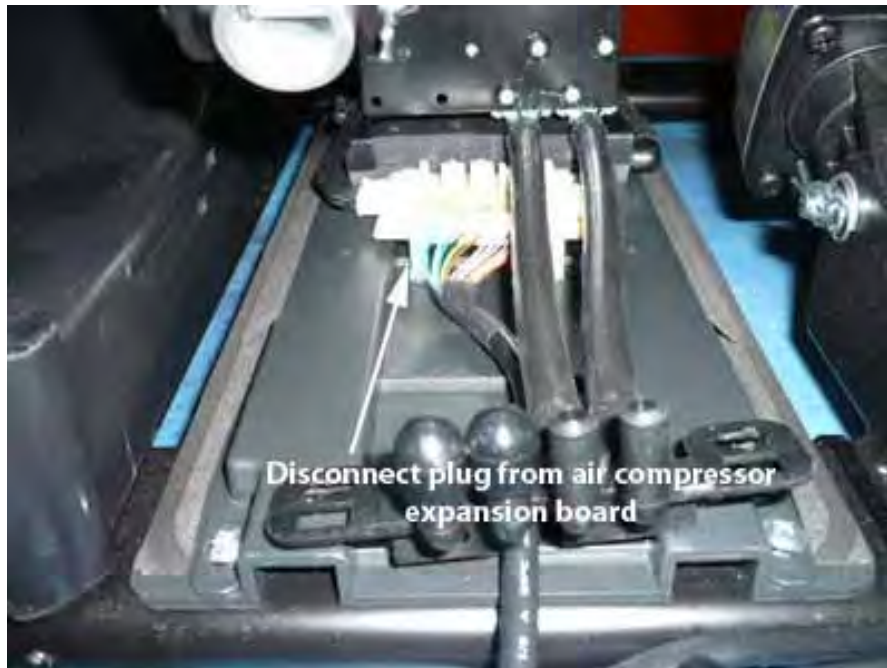

Step 8) Remove the 2 screws holding the air compressor to the rear chair frame.



Step 9) Remove the 2 screws holding the air compressor to the front chair frame.



Step 10) Slide the air compressor out from the front of the chair.

Step 11) Reverse these instructions to reinstall the new air compressor.