


Back Cover Removal instructions

For questions, clarifications or assistance call 1-800-592-0948 x 1

Tools required

One Phillips screwdriver, medium length

BEFORE BEGINNING, turn the power switch on the chair off and unplug the power cord. Allow the chair to sit for 10 minutes before proceeding.

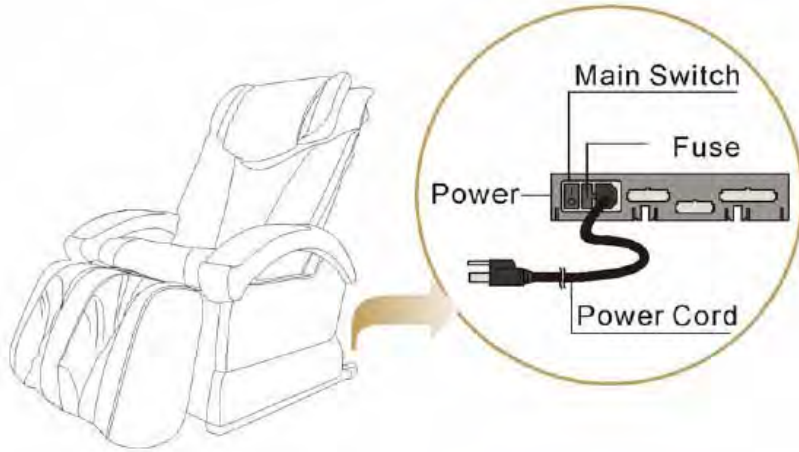

Step 1: Lay the back of the chair down over the seat of the chair.



Reach under the back of the chair with your right hand.....about 6” in from the left side and about 4” in from the back cover. Locate the latch mechanism with a finger and pull latch out to release.



CAUTION, when the latch is released, the back will be free weight and will pivot.
Hold the top of the chair and lay forward gently.



Hold onto the seat back until it is firmly lying on the seat.
DO NOT ALLOW chair back to 'drop' unsupported onto the seat.

Step 2: Once the back of the chair is folded down and you are ready to begin, locate the six screws holding the back cover on.



Using your # 2 Phillips screw driver remove the six screws. Disconnect the two air hoses in the upper left corner of cover as shown with arrow above. Lift the back cover up and off and set aside.