


Elite Optima instructions for releasing and or folding down the backrest
For questions, clarifications or assistance call 1-800-592-0948 x 1

Tools required

None

BEFORE BEGINNING, turn the power switch on the chair off and unplug the power cord.

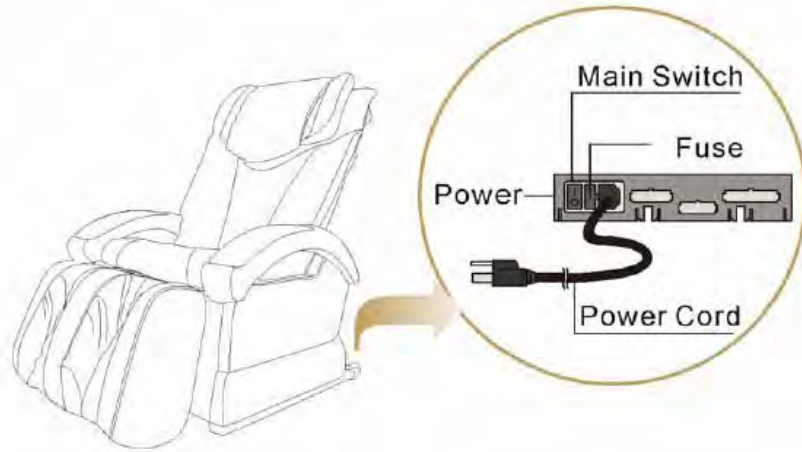

Step 1: Lay the back of the chair down over the seat of the chair.



Reach under the back of the chair with your right hand.....about 6” in from the left side and about 4” in from the back cover. Locate the latch mechanism with a finger and pull latch out to release.



CAUTION, when the latch is released, the back will be free weight and will pivot.
Hold the top of the chair and lay forward gently.



Hold onto the seat back until it is firmly lying on the seat.
DO NOT ALLOW chair back to 'drop' unsupported onto the seat.