


## Elite Triumph Footrest Removal Procedure

For questions, clarification or assistance call 800-592-0548 X 1

Tools required: scissors or snips, 10mm wrench, pliers

**BEFORE BEGINNING** turn the main power switch off as illustrated below and unplug the power cord.

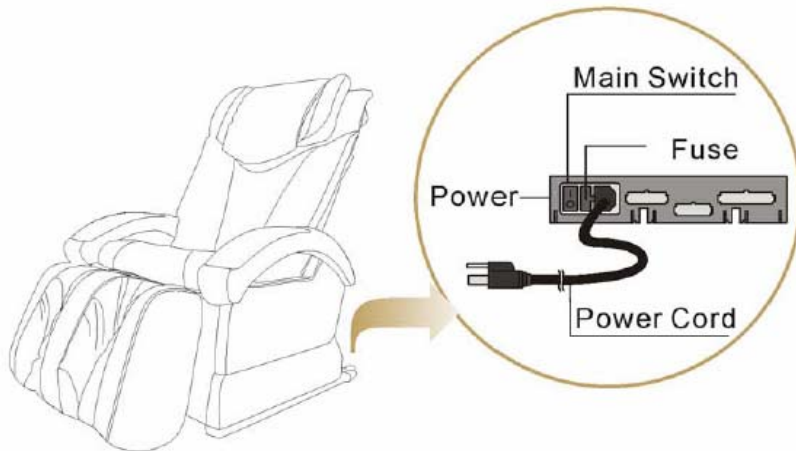

**Allow the chair to sit for 10 minutes before proceeding.**


Lift leg rest assembly until it is even with the seat.




Lock the leg rest assembly in the up position by reaching underneath the footrest assembly and pushing the locking lever (square tubing) up until it is flat against the upper tubing and locks the leg rest in up position.



Clip the zip tie holding the hoses to the frame.

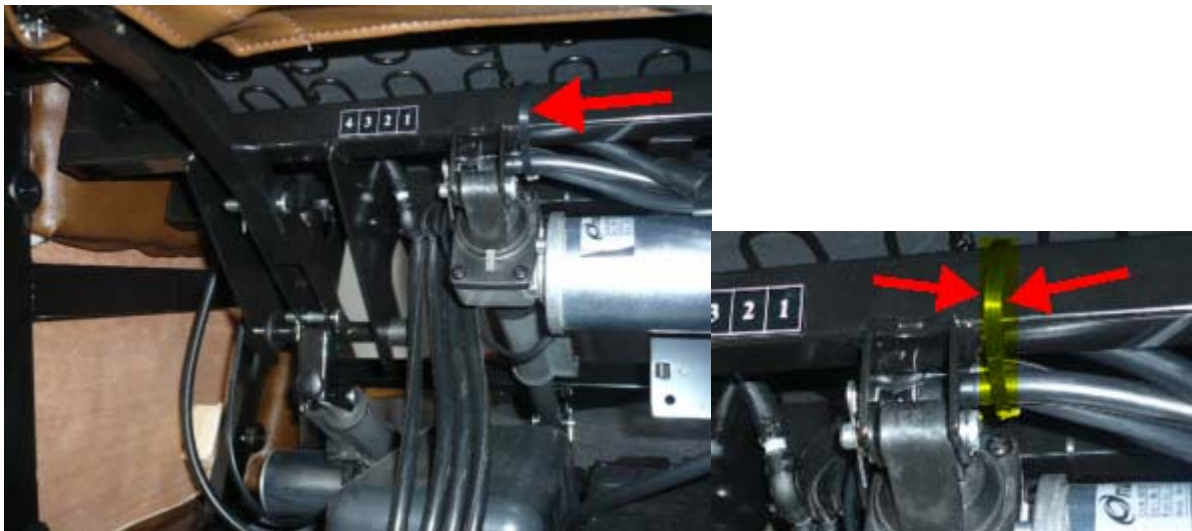

Remove the 3 hoses at the connectors mounted to the frame. The hoses are numbered and correspond to position as marked 1-4 on frame.

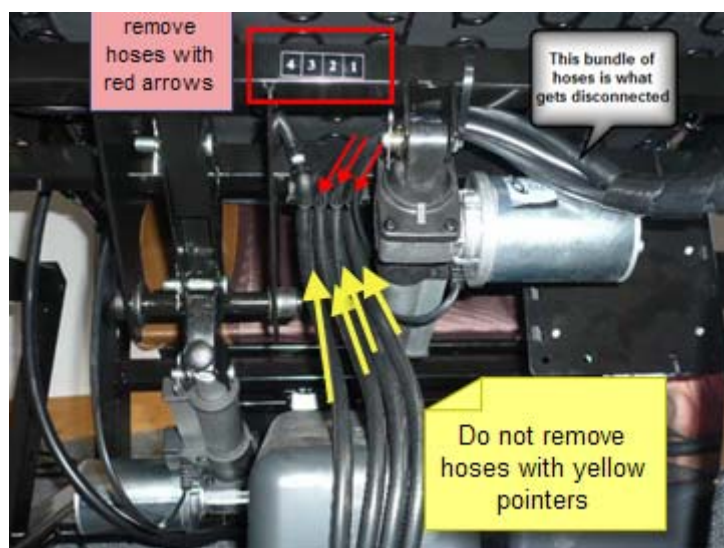

Lay the back of the chair down over the seat of the chair.

Reach under the back of the chair with your right hand.....about 6" in from the left side and about 4" in from the back cover. Locate the latch mechanism with a finger and pull latch out to release.






CAUTION, when the latch is release it will be free weight and will pivot.  
Hold the top of the chair and lay forward gently.




Hold onto the seat back until it is firmly lying on the seat.  
*DO NOT ALLOW* chair back to 'drop' unsupported onto the seat.

Underneath the seat, you will see a cover to the expansion board. Push in where arrow is pointing to release clip holding cover onto the mounting plate. Remove cover.

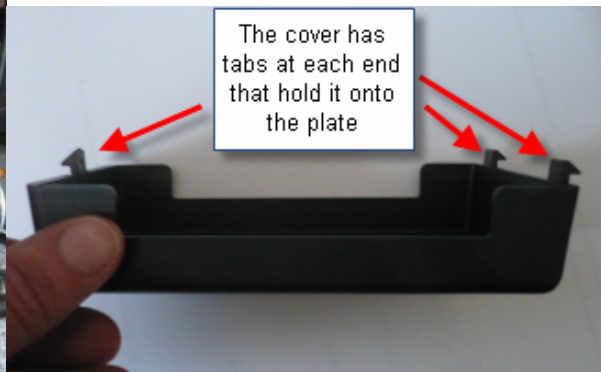

Remove the “H” plug from the expansion board and clip the zip ties holding the wire to the frame.

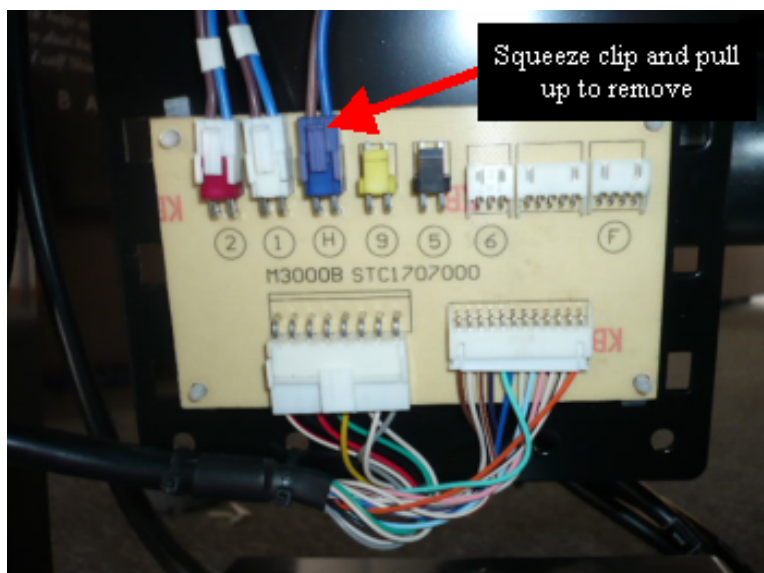

Now, all hoses and electric connectors will be free from the rest of the chair.

While supporting the footrest, remove the pin, spring and rod from footrest lever that was locked to hold footrest in upright position.



Lift up front of seat cushion then pull back Velcro flap for the footrest upholstery. On the left and right side you will see the nut, washer and screw holding the footrest assembly to the frame. Remove nut, washer and screw from each side.



When both screws have been removed, the footrest assembly will be totally free from the base of the chair.



To reinstall, reverse procedure.